

# Maintenance


## Electric Transmission

### Warning

To avoid serious personal injury, always remove the battery pack from the mower before cleaning or performing any maintenance.


### Transmission DC motor


To ensure optimum performance of the electric transmission, General Transmissions recommends periodically cleaning the DC motor.

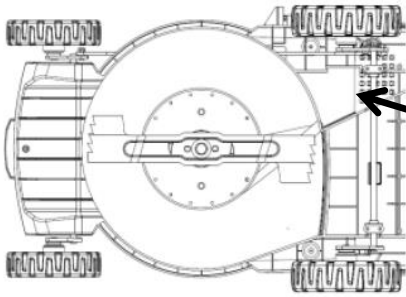

The electric transmission is accessible under the mower, between the rear wheels. Refer to the mower owner's manual for removal of the cover.

### Clean the transmission DC motor

Blow out the area surrounding the transmission and DC motor using a blowgun or a compressed air can.  **Do not use water.**

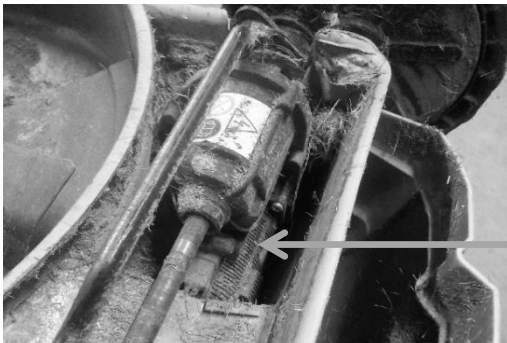

The DC motor is located below the transmission

Area to blow

Before cleaning



After cleaning

