

# RS800 Transaxle Axle shaft seal replacement

This operation does not require to remove the transaxle from the tractor, but only to remove the rear wheel of the tractor.

## I- Remove rust from the axle shaft

Remove the rust and clean the axle shaft before removing the damaged seal.



**Before**



**After**

## II- Remove the damaged seal using a small flat screwdriver



Please feel free to contact us for more information  
[service@generaltransmissions.com](mailto:service@generaltransmissions.com)

# RS800 Transaxle Axle shaft seal replacement

## III- Lubricate the axle shaft, seal and bushing



**Damaged  
seal**



**New seal**



## IV- Install the new seal and clean the shaft.



Please feel free to contact us for more information  
[service@generaltransmissions.com](mailto:service@generaltransmissions.com)