


# Neutral setting instruction

## Model RT400 (P/N 87095)

### I- Verify the neutral position of the transmission

-In neutral:

1. The rotating cam position does not allow to speed up the tractor using the pedal.
2. The brake lever must not be in contact with the rotating cam.
3. The secondary variator can be manually rotated without driving anything inside the transmission.

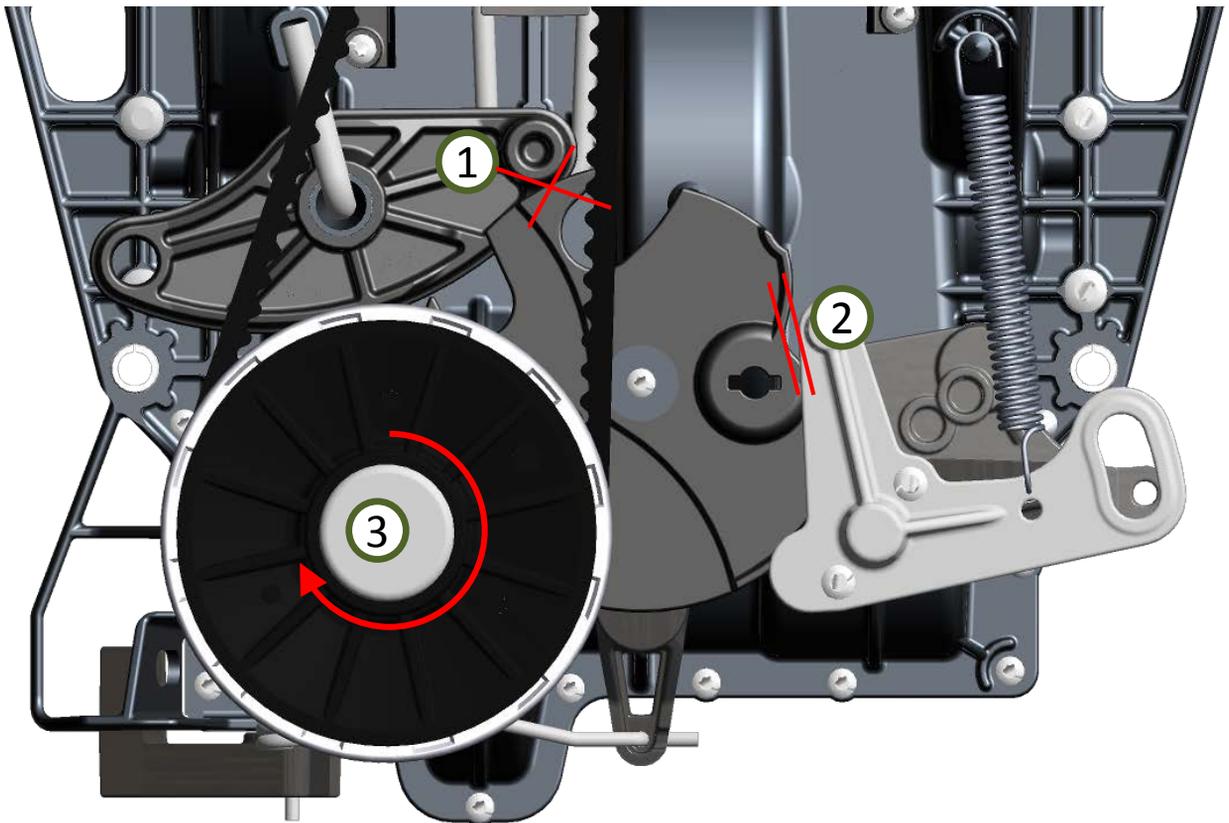


## II- Adjust the fender panel on the right side of the tractor

1. Slightly unscrew the 2 screws of the panel.
2. Move the panel to position the selector lever in neutral position.
3. Tighten the screws.

Selector lever panel



Panel screws

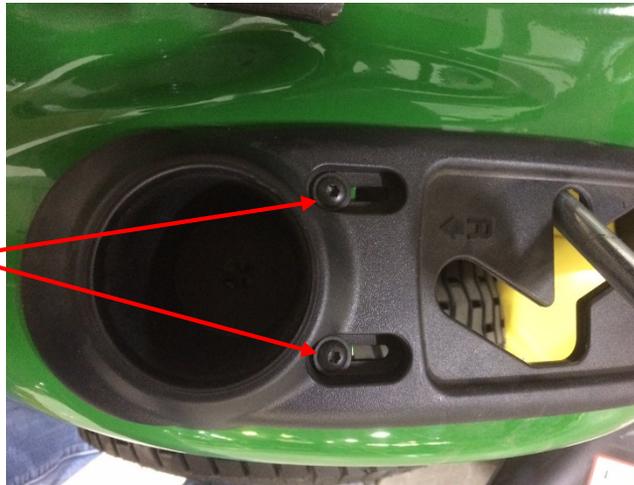

Correct position

